

## EYFR02B Quick Set-up Guide

### Horizontal Key = Programming (flashing blue light)



Pull and reinsert battery, pull trigger to learn the tool  
 – Hold trigger until you get a green light

If it did not learn:

- ✓ Is the tool off **F** mode?
  - Has to be in a PS (program setting) 1-30 to learn
- ✓ Is it a Radio Tool?
  - There will be a **R** in the serial # and model #
- ✓ Are you within Range?
  - Must be within 33 feet
- ✓ Is the tool stored in another Qualifier?
  - If so remove tool from other Qualifier.

### Vertical Key = Ready (solid blue light)



Turn key vertical to use after programming

- ✓ Note signal strength
- ✓ Yellow/Green = Very Good
- ✓ Orange = Good
- ✓ Red = Poor
  - Check for machine and electronic interference.
  - Try to achieve a clear line of sight
  - Make sure antenna is clear of obstruction
  - Change RF channel (refer to owners manual)

### Connection to Device Programmer Software



Use RS232/DB9 USB adapter for programming  
 – Download device programming software from [website](#).

If it won't connect:

- ✓ Is it on 9600 baud rate?
  - Check USB device driver baud rate on your PC
  - Check baud rate in device programmer
- ✓ Is the correct COM port selected?
  - Check COM port in device programmer
- ✓ Read, adjust settings then write

